

# Automatic Booster Pump - Compact Booster Type AM - PC

## **OPERATIVE FEATURES**

- Quiet operation, thanks to EBARA design that makes this possible.
- Starts and stops the pump when the tap is opened or closed.
- Maintain pressure at a constant level during operation, eliminating hot/cold shower fluctuations.
- Shuts off the pump if loss of prime or dry-running occurs.
- Ensure your pump system to operate at optimum performance.

#### PC CONTROLLER

**PRESSCONTROL** (**PC**) is an electronic device ensuring optimum control of automatic water pressure system.

An intelligent combination of hydraulic and electronic know-how, PC controller monitors both pressure and flow and automatically controls the pump efficiently. No pressure tank required and no adjustment of pressure setting is required. Also, any risk of pump damage as a result of dry running is eliminated, as the device will automatically cut-off should the incoming water supply is insufficient.





Quality . Value . Performance

MODEL	kW	*Application	<i>ll</i> min m³/h	20 1.2	30 1.8	40 2.4	50 3	60 3.6	80 4.8	Connection
Compact Booster AM 6-PC	0.4		ë	30.7	28.2	25.2	21.8	18	9	1" x 1"
Compact Booster AM 8-PC	0.6		Head	39.7	36.1	32	27.4	22.4	10.5	1" x 1"

\*For guidance only

## **DIMENSION**

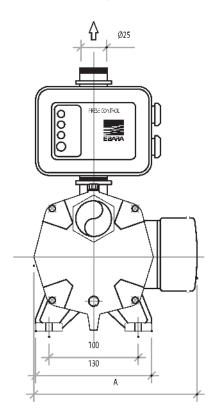

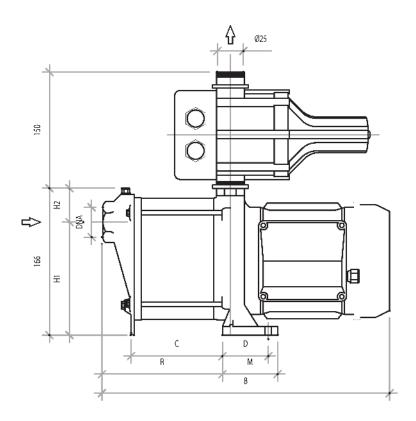

FRONT VIEW SIDE VIEW

Pumps Type	kW	Dimensions (mm)									D.V.4
		Α	В	С	D	E	H1	H2	M	R	DNA
Single Phase		1~									
COMPACT AM 6-PC	0.4	183.5	333.3	108	51.5	146.5	127.5	38.5	62	146.5	1" NPT
COMPACT AM 8-PC	0.6	183.5	359.5	134	51.5	172.5	127.5	38.5	62	172.5	1" NPT

<sup>\*</sup> Dimensional details are provided for reference only.

<sup>\*</sup> All specifications are subject to change without prior notice.



## EBARA Pumps Malaysia Sdn Bhd

6, Jalan TP3, UEP Subang Jaya Industrial Park, 47620 Subang Jaya, Selangor, Malaysia. EBARA Tel: 03-8023 6622 Fax: 03-8023 9355

Email: sales@ebara.com.my Website: www.ebara.com.my Authorised dealer:

